


BMS WIRING DIAGRAM

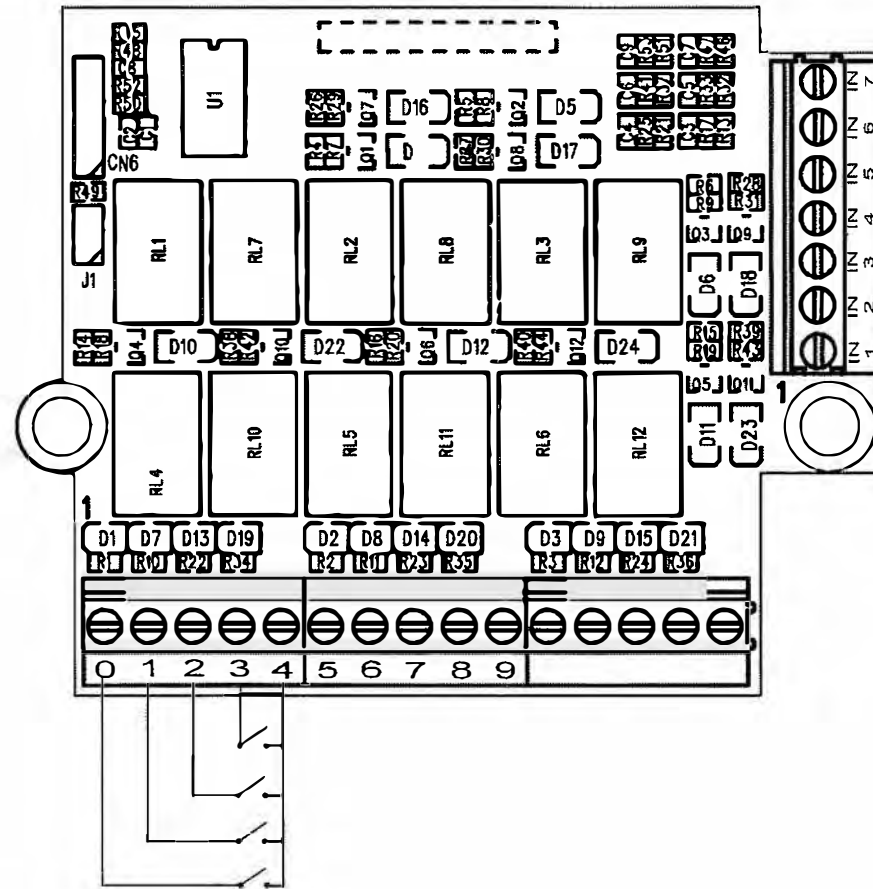

The BMS board controls the following alarms:

OUTPUT	
0/4	PUMPS STOP ALARM
1/4	MAX LEVEL ALARM
2/4	LOW BATTERY VOLTAGE ALARM
3/4	NO POWER NETWORK ALARM

01284 658770 | sales@automatedenvironmentalsystems.co.uk



Title:	POWER BOX BMS BOARD
Board:	
Data:	07/2024