


Quick Install

Direct Feed Rainwater Harvesting System - Below Ground



01284 658770 | sales@automatedenvironmentalsystems.co.uk

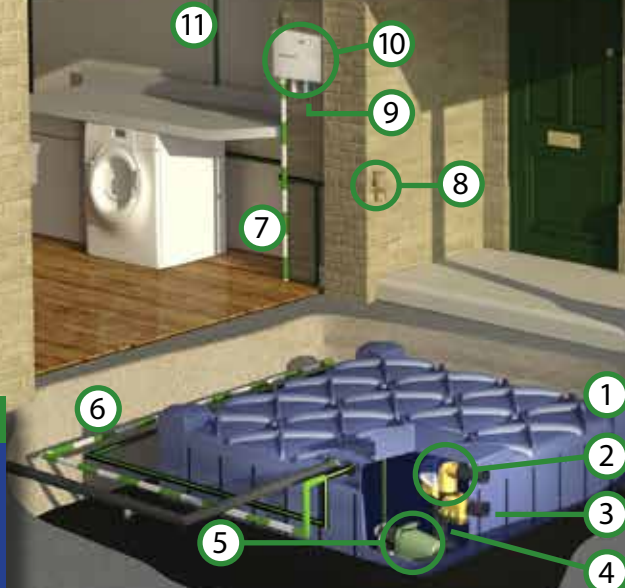

Uses For This System

- Toilets
- Washing Machines
- Garden Irrigation
- Vehicle Washing

1. **Tank:** Single piece shallow dig tank.
2. **Self-Cleaning Filter:** Pre-Fitted.
3. **Overflow Pipe:** Making sure that there is sufficient fall to encourage flow to the soakaway.
4. **Level Sensor:** Connects back to the control unit.
5. **Pump:** Supplied with 25mm outlet connector, must be primed before use. *See comprehensive pump manual.*
6. **Black & Green HDPE Pipe:** Running from the pump to the property using 4-inch service duct.
7. **Mains Water Supply:** Running from the control unit to the underground tank.
8. **Outside Tap:** Must be plumbed directly from the pump. *See plumbing schematic in the control unit installation manual.*
9. **Mains Water Supply:** Running into the control unit.
10. **Control Unit.**
11. **Rainwater to appliances.**

System Components


1. Control unit
 2. Pump
 3. Tank with Filter
 4. Walk on Lid
 5. 635mm Extension Shaft
- » Comprehensive user guide and installer manuals
 - » Green & Black HDPE pipe
 - » Tank pipe



1



2

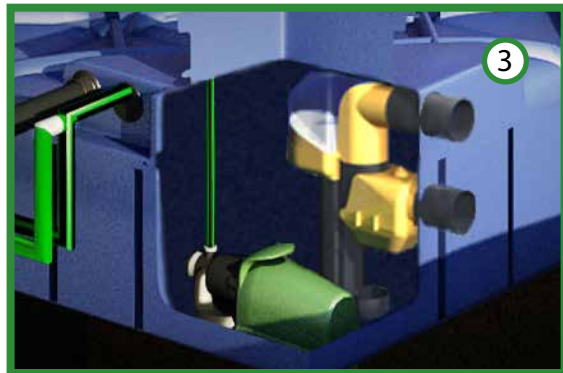

3



4



5

Important Notes on Installation

Tank

- **Make sure your underground tank is kept clean and free of debris.**
- Do not use the pump supplied to empty a dirty underground tank.
- Do not use open gullies or P Traps.

Control Unit & Piping

- Mount the control unit to the wall in a dry, frost free area such as in a utility room or where mains water is available.
- The overflow pipe at the middle of the control unit should flow to the exterior of the property through a pipe which offers no constriction and discharged over the ground.
- Pipe the outlet of the weir using 32mm waste pipe from the bottom left of the unit to the rainwater storage tank. At least the first 300mm must be straight.
- Channel the float switch cable to the underground storage tank through a 4-inch service duct which also carries (i) the mains electricity supply to the submerged pump (if so fitted) and (ii) the return pipe carrying rainwater from the storage tank back to the appliances in the house.
- Attach the float switch bracket to the 4" calmed inlet down pipe as shown to the right.
- Make sure the bracket is not positioned too low so the float switch catches on the calmed inlet boot.
- The 7500L tank does not have a pump sump therefore the bracket must be positioned 5 to 10cm above the inlet of the pump.
- Internal pipe work must be labeled to identify rainwater.
- For further plumbing schematics and installation of pipe work please see installation manual, provided within the control unit box.
- Flush through your pipework before connecting the Rain Backup in a Box.



Pump

- Pump priming: It is **essential** that the pump is primed before use. See pump installation manual supplied with the pump.
- Connect the outlet connection using rainwater marked pipe of diameter between 25mm or 32mm.
- The vertical rainwater pipe should be the right length so that a 90° elbow (supplied) in the turret is at the level of the 4 inch service pipe in which the rainwater pipe is fed to the building.
- It is recommended to place an electrical connection into the highest point of the turret for easy quick maintenance, IP66 rated or better connection box or socket must be used, not supplied.

For further instruction on priming and installation of the pump and how it functions please see the manual provided.

For more details installation instructions please see the install guides supplied.